## § 1205.6

for at least 6 minutes immediately prior to the test.

- (ii) The blade must be at maximum operating speed when the blade control is released.
- (c) Starting controls location. Walk-behind mowers with blades that begin operation when the power source starts shall have their normal starting means located within the operating control zone unless the requirements of paragraphs (a)(1)(iv) (A) or (B) of this section apply to the mowers.

[44 FR 10024, Feb. 15, 1979, as amended at 46 FR 54934, Nov. 5, 1978]

## § 1205.6 Warning label for reel-type and rotary power mowers.

(a) General. Walk-behind power lawn mowers shall be labeled on the blade housing or, in the absence of a blade housing, on other blade shielding or on an adjacent supporting structure or assembly, with the warning label shown in Fig. 7. The label shall be at least 3.25 in (82.5 mm) high and 4 in (102 mm) wide, and the lettering and symbol shall retain the same size relation to each other and to the label as shown in Fig. 7.

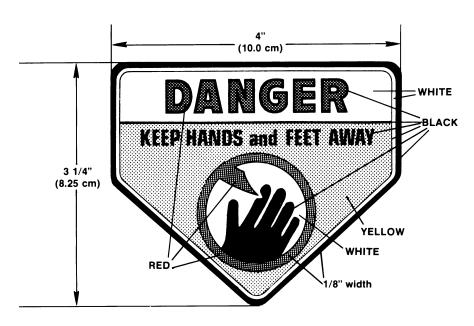


FIGURE 7

- (b) Rotary mowers. Walk-behind rotary mowers shall have one label as shown in Fig. 7, on the blade housing. The label shall be located as close as possible to any discharge opening, or, if there is no discharge opening, in a position that is conspicuous to an operator in the normal operating position.
- (c) Reel-type mowers. Walk-behind power reel-type mowers shall have one label as shown in Fig. 7, located as close to the center of the cutting width

of the blade as possible. However, in the absence of a suitable mounting surface near the center of the cutting width, the label shall be placed on the nearest suitable mounting surface to the center of the cutting width.

 $[44\ {\rm FR}\ 10024,\ {\rm Feb}.\ 15,\ 1979,\ {\rm as}\ {\rm amended}\ {\rm at}\ 45\ {\rm FR}\ 86417,\ {\rm Dec.}\ 31,\ 1980]$ 

## § 1205.7 Prohibited stockpiling.

(a) Stockpiling. Stockpiling means manufacturing or importing a product